


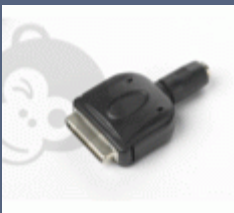
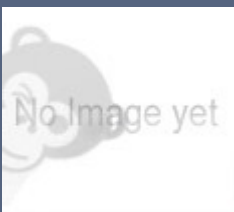



These are the tips that are included in the PowerMonkey for Forensics Kit. Note that those highlighted in orange are included with the PowerMonkey Classic. Additional or new tips not listed here are available separately at a small cost. Hidden Data Recovery Services reserves the right to change tips that are included with the PowerMonkey for Forensics Kit at any time and without advanced notice.

BRAND	TIPS	Compatibility Chart
no brand 	<b>DC3.0</b>	Motorola C115/C116/C117/C118/C136/C137/C139/C155/C168/C193/ C195/C200/C201/C202/C205/C257/C261 Motorola W220 /  Motorola V220 / Pentax Optio 50 digital camera/
no brand 	<b>DC2.5</b>	Motorola C290 /i500, BenQ-Siemens HB610 Bluetooth  headset LG C810 PDA PalmOne/Tungsten E /Zire 31 /Zire 7 / iAudio X5 (MP3) VK Mobile Helio VK650C,  Helio Kickflip iAudio X5 SAMSUNG SPH-A660/A760/MM-A700/A880/A920/VGA-1000/ VM-A680 /WEP-200 IVI-660 /N240/N270/N400
no brand 	<b>DC2.3</b>	Canon - Powershot A300 Fuji - Finepix  A310 Minolta Dimax F100 / Pentos Optio 50 (voltage 3.0; PM switched off)
no brand 	<b>DC2.0</b>	Nokia N70/N71/N72/N73/N75/N80/N90/N91/N92/N93  Fuji - Finepix 4700 /
no brand 	<b>DC3.5x 1.3</b>	Archos series Media Player - AV300/ AV400
no brand 	<b>DC4.0</b>	Creative MuVo 2/MuVo2 FM/Zen/Zen PMC/Zen Sleek/ Zen Touch/Zen Vision,SONY PSP/Canon 750 + V3 Olympus C-450 zoom Olympus Camera: U-10D/D-15D/D-20D/D-  25D/D-30D/ D-300D/D-400D/D-410D/X-1/X-2/X-3/AZ-1/C-50Z/C-60Z Dell Axim X3/X5
no brand	<b>DC5.5</b>	

		
<p>Apple</p> 	<p><b>iPod</b></p>	<p>iPod 3rd, 4th and 5th Generation; iPod Mini, iPod Nano, iPod Photo, iPod Video Also available in black</p>
<p>Acer</p> 	<p><b>N35</b></p>	<p>O2 X3/ Fuji FinePix F10 /Z2</p>
<p>Dell</p> 	<p><b>PDA</b></p>	<p>Axim X30</p>
<p>DoCoMo/FOMA</p> 	<p><b>VGS</b></p>	
<p>DoCoMa/Vodafone</p> 	<p><b>TU-KA</b></p>	
<p>HP IPAQ</p> 	<p><b>PDA</b></p>	<p>HW6510/HX2190/HX2790/HW6910/HW6915/HW6920/ HW6825/HW6945/HX2115/HX2490/HX2495 iPAQ H3970</p>
<p>LG</p>	<p><b>VX8300</b></p>	<p>Migo/VX3300/VX3400/VX3450/ VX4650/VX4700 /VX5200/VX5300/ VX6100/VX7000 /VX8000/VX8100 VX8300 AX245/AX355 /AX390/AX4270 AX4650/AX4750/AX490/AX5000 VX9800/UX5000/UX4750/UX210 UX245/UX355/UX399/MM535 PM325/FUSIC/LX325/LX350</p>

		
<p>LG</p> 	<p><b>Choco-late</b></p>	<p>KG-800 /VX-8500</p>
<p>LG</p> 	<p><b>8080</b></p>	<p>C1100/C1300/C1500/C2000/C3300/C3310/C3320 /CE500/8080/6260/SC9288/SC9388/8180/ 7020</p>
<p>Mini USB</p> 	<p><b>V3</b></p>	<p>RIM Blakberry full series, Skype Netgear 5PH101 RAZR Series, L2/ L6/L6g/SLVR L7/M300, KRZR K1m, A1200/A668/A70/A732/A780/C305/C362/V235, PEBL E680/E680I/U6/V360/C362/C305/C363/V320/V191/E2/ MotorolaQ Mio Digi Walker</p> <p>168/268/269/269+/336BT/336g/336i/339/ 8390//8870/A201/A701/C510E C710/P350/P550 Panasonic Lumix</p> <p>DMC-FX01/ T mobile SDA-11</p>
<p>Motorola</p> 	<p><b>V66</b></p>	<p>ROKR E1/E2, iM1000, 388C/A1000/A630/A760/A830/ A835/A840/A845/A860/A920/A925/C331/C332/C333 C341/C343/V500/V547/V600</p>
<p>Motorola</p> 	<p><b>v998</b></p>	<p>V50 /V998 /V8160</p>
<p>Motorola</p> 	<p><b>W220 DC3.0</b></p>	<p>Motorola C115/C116/C117/C118/C136/C137/C139/C155/C168/ C193/C195/C200/C201/C202/C205/C257/C261</p>
<p>Nintendo</p>	<p><b>DS</b></p>	<p>Nintendo DS, Gameboy Advanced SP</p>



Nintendo



**DS Lite**

Nintendo DS Lite gameboy

O2



**XDA**

O2 XDA and Xphone PDA Series, Sprint PDA  
PPC-6700, Vodafone

V1640/V2140/VPA  
QTK series PDA, VPA Compact, SPV C500/M500  
HTC Artemis P3300 /MteoR /Excalibur s620 /  
Hermes 100 /200 /300 /Trinity P3600 /TyTN  
Dopod PDA 565/575/585/818/828/838/900,  
Orange SPV PDA series.  
Please note this is the same as MINI USB

Palm Tungsten



**i750**

Palm i705/M120/M130/M500/M510/M515  
Tungsten C /T /T2 /T3 /W /Zire 71

Palm Tungsten



**E2**

TX /Treo 650/680/700p/700w/700wx/750V/  
Tungsten E2/T5

Panasonic



**D92**

MX6/MX7/SA6/SA7/VS2/VS3/VS6/VS7  
Sharp

550SH/770SH/902/903/703/GX15/17/25/30/30i  
NEC E Series: E101/E228/E313/E540/E606/E616  
/E616V/E808N/E808S/E808Y

Panasonic



**D95**

Philips

**929**

Savvy DB

		
<p>Vodafone Sagem</p> 		
<p>Samsung</p> 	<p><b>A288</b></p>	<p>A200/A210/A288/A300/A308/A310/A399/A400/A408/A475  A500/A505/A509/A530/A539/A561/A563/A564/A570/A591/  A592/A608/A610/A650/A670/A720/A790/A795A800/A809/  A890/A900/C100/C120/C207/C225  D100/D307/D347/D357/D407/D410/D415/D417/D500/  D500C/D508/D600  E100/E105/E315/E316/E317/E330N/E335/E350/E370  /E400/E530/E630/E635/E700/E715/E730/E770  K258  M500/MM-5600/N200/N288/N400/N500/N620/N625  N626/N628/N635/P107/P207/P408/P735/Q200/Q208  /Q300/R200/R208  /R210/R220/R225/  R225M  S307  T100/T108/T200/T208/T209/T309/T319/T400/T408/T410/  T500/T609/T619/T709/T719  V200/V205/V206  X199/X209/X219/X309/X319/X359/X640</p>
<p>Samsung</p> 	<p><b>E900</b></p>	<p>E900/E870/X820/D800/D807/D820/D830/  P300/D520/Z560/Z400/Z510/Z510i/Trace/T509/T519/  T629/T809/U420  D900/Z510</p>
<p>Samsung</p> 	<p><b>A900/A990</b></p>	<p>A630/A645/A850/A870/A930/A950/A970/A990</p>
<p>Samsung</p> 	<p><b>Z500</b></p>	<p>Z500/Z130/Z140/Z300/E720/E810/E818/D720</p>
<p>Samsung (No Image)</p>	<p><b>A110</b></p>	<p>SPH-A110/A120</p>
<p>Siemens (No Image)</p>	<p><b>A31</b></p>	<p>A31/AF51/C81/EF-81/EL71/S68</p>

		
<p>Siemens</p> 	<p><b>C25</b></p>	<p>C25/X25/C35/C45/3518/6618/C2588/3518/3618/3508/3568 /6688/2118/M35/M50/ME45/MT50 S35/S45/SL42/A35/A36/A45/A10/SL50/SL45 /S25/S35/S45/2508</p>
<p>Siemens</p> 	<p><b>C55</b></p>	<p>C55//C56/C62/C65/C75/A51/A55/A56/A52/A70/A75 /C46/M45/M65/M75/MC60/S56/S66/S57 /S75/SL55/SL56 SX1-4/2128/SC55/AX72/AX75/CF110/CF62/CF75/ CFX65/CL70/CL75/CT56/CT66/CX65/CX70/CX75/ME75 SF65/SK65/SL75/SP65/SXG75</p>
<p>Sony</p> 	<p><b>Clie</b></p>	<p>Clie PEG Full Series</p>
<p>Sony</p> 	<p><b>DV1</b></p>	<p>Cyber-shot DSC-H1/H2/H5/M2/S40/S500/S600 /T10/T30/T50/T7/W100/W30/W40/W5/W50/W7/W70 DSC-F88/L1/N1/N2/P10/P100/P12/P150/P200 /P32/P41/P43/P52/P72/P73/P8/P92/P93/S60/S90/T5/T9/ V1/V3/ DSC-W1/DSC-T9</p>
<p>Sony</p> 	<p><b>DV2</b></p>	<p>CCD-TR3300/TR516/TR716/TR76/TR818/TR910/TRV118/TRV128/TRV318/TRV328/TRV36/TRV41/TRV43 CCD-TRV46/TRV51/TRV57/TRV58/TRV66/TRV67/ TRV68/TRV81/TRV87/TRV88/TRV98 CD Mavica MVC-CD200/CD250/CD300/CD350/CD400/CD500 Cyber-shot DSC-F707/717/828/R1/S70/S75/S85 DCR-TRV210/TRV340/TRV350/TRV360/TRV460/TRV510/ TRV520/TRV525 FD Mavica MVC- FD100/FD200/FD97 Handycam CCD-TR315/TR416/TR618/TR917/TR940 /TR97/TRV107/TRV108/TRV138/TRV15/TRV16/TRV17 Handycam CCD-TRV215/TRV25/TRV308/ TRV315/TRV338/TRV35/TRV37/TRV408/TRV49/TRV608/ TRV615/Handycam CCD -TRV63/TRV65/TRV715/TRV75/ TRV78/TRV815/TRV85/TRV93/TRV95/TRV99 Handycam DCR-  DVD100/DVD101/DVD200/DVD201/DVD300/DVD301/ Handycam DCR-PC100/PC101/PC105/PC110/PC115/PC120BT/ PC330/PC9/TR7000 Handycam DCR-VX1000/VX2000/VX2100/VX700, Handycam HDR-FX1/HC1 Mavica MVC-CD1000 Handycam DCR-TRV Series</p>
<p>sony</p>	<p><b>DV3</b></p>	<p>Sony Cybershot P9</p>

		
<p>sony</p> 	<p>DV4</p>	<p>under consideration</p>
<p>Sony Ericsson</p> 	<p><b>K750i</b></p>	<p>W series, J100/K750/K800//M600/P990/Z520/Z530i/Z710 / HBH-GV435/</p>
<p>Sony Ericsson</p> 	<p>T28</p>	<p>J200/J300/K300/K500/K600/K700/P800/ P910/Z1010/Z200/Z300/Z500/Z600/Z800/V600i T series, R Series, S Series/ V600i / J700i</p>
<p>USB Standard</p> 		<p>For general charging where electronic device is supplied with USB charging cable</p>
<p>USB for iPod</p> 		<p>IPOD Shuffle /Nano/Mini/Video</p>
<p>USB Retractable Cable</p> 		<p>For charging the powermonkey from laptop computer's</p>